




4 Le Pas du Château 85670 SAINT PAUL MONT PENIT TEL : +33 (0)2 51 98 55 64 FAX : +33 (0)2 51 98 59 07 Email : <u>info@medicatlantic.fr</u> Site Internet : http://www.winncare.fr

XXL XPRESS & DIVISYS



XA1P/C-7/8 XB1P/C-7/8

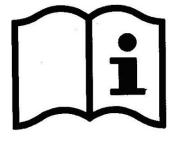



1. TRANSPORT AND STORAGE	4
2. BED ENVIRONMENT CONDITIONS	4
3. GENERAL USE	4
3.1. PRECAUTIONS FOR USE	4
3.2. ELECTRICAL CHARACTERISTICS	6
3.2.1. ELECTRICAL DATA	6
3.2.2. PROTECTION LEVEL AGAINST DUST AND LIQUID PENETRATION	7
3.2.3. ELECTROMAGNETIC COMPATIBILITY	8
3.2.4. EQUIPOTENTIALITY	9
4. BED BOARDS 120/140/160CM WIDTH COMPATIBLE	10
5. COMPATIBLE ACCESSORIES	11
S. COMPATIBLE ACCESSORES	11
<u>6. USE</u>	12
6.1. PURPOSE OF THE BED	12
6.2. SPECIFIC PRECAUTIONS FOR USE	12
6.2.1. RESIDUAL RISKS	12
6.3. GENERAL DESCRIPTION	13
6.4. TECHNICAL CHARACTERISTICS	13
6.4.1. DIMENSIONS	13
6.4.2. WEIGHT	15
6.4.3. NOISE	16
6.5. ELECTRICAL CONNECTION DIAGRAM	16
6.6. REMOTE CONTROL	17
6.6.1. LOCKABLE REMOTE CONTROL HB02x (LOCK OR UNLOCK) 6.7. BRAKING	17 18
6.7.1. SEPARATE BRAKING	18
6.7.2. CENTRALIZED BRAKING	18
0.7.2. CENTRALIZED BRAKING	10
7. ASSEMBLY AND DISASSEMBLY	19
7.1. ASSEMBLING THE BED XXL XPRESS	19
7.2. MOUNTING XXL XPRESS BED AND XXL BED DIVISYS	23 26
7.3. DISMANTLING	20
8. OPERATION OF THE SLEEPING SURFACE	28
8.1. BACK REST	28
8.1.1. Standard back rest	28
8.1.2. BACK REST WITH TRANSLATION	28
8.1.3. EMERGENCY RELEASE OF THE BACK REST (CARDIO PULMONARY RESUSCITATION)	29
8.2. LEG REST	29
8.2.1. LEG REST WITH MANUAL CRANK (C)	29
8.2.2. LEG REST WITH ELECTRIC FOLDING (P)	29
9. INSTALLATION OF ACCESSORIES	29

9.2. METAL SIDE RAILS	30
9.3. WOODEN BARRIERS	31
9.4. ALUMINUM HALF SIDE RAILS	32
9.5. Angled Lifting Pole and IV stand	33
10. MAINTENANCE	34
10.1. IDENTIFICATION	34
10.2. INSTRUCTIONS FOR DISMANTLING THE MOTORS	34
10.3. MAINTENANCE	35
10.4. QUALITY INSPECTION OF MEDICAL BEDS	36
10.5. CLEANING AND DISINFECTION	37
10.6. LIFETIME	38
10.7. GARANTIES	38
10.8. TROUBLESHOOTING GUIDE	39
11. SCRAPPING	40

Dear Sir/Madam,

You have acquired a WINNCARE medical bed equipped with its accessories, and we thank you for your custom.

Our beds and their accessories are designed and manufactured in compliance with the essential requirements of the European Directive 93/42/EEC and 2007/47/EEC.

They are tested in conformity with standard EN 60601-2-52 (2010) in their commercial configurations, including the boards and accessories that we manufacture, so as to ensure you maximum safety and performance.

As a result, maintenance of the contracted good's warranty depends on compliance with the conditions for use recommended by WINNCARE and the use of original accessories, which also guarantees you safe use of the medical bed and its accessories.

1. TRANSPORT AND STORAGE

For transport, the bed should be in its low position, on a pallet, and strapped and protected. The wired control and supply lead should be attached to the bed base.

The head and footboards are protected and strapped to the sleeping surface.

The bed should be transported upright when in its original packaging in compliance with the instructions printed on the packaging.



It is strictly forbidden to stack packages weighing over 60kg/m², whatever position they are in.

Before transporting or dismantling the bed, make sure the back and leg rests are fixed to the frame of the bed base.

 
2. BED ENVIRONMENT CONDITIONS

The bed, along with the boards and accessories, must be transported and stored at a room temperature of between -10°C and +50°C,

The bed, along with the boards and accessories, must used at a room temperature of between +10°C and +40°C,

Relative humidity of between 30% and 75%.

Atmospheric pressure between 700hPa and 1060hPa



Observe the specified environmental conditions

3. GENERAL USE

3.1. Precautions for use

Before use, it is essential to read these instructions carefully. They contain advice on using and looking after the bed to guarantee optimum safety.



The user and staff must be trained and aware of the risks associated with using the bed. He must not allow it by children and be vigilant when used by confused or disoriented people. Although the bed is conforming with Electromagnetic Compatibility, some devices may alter how it functions, in which case they must be used at a distance or not used at all.

The bed is a medical device and must not be modified under any circumstances. You must ensure its traceability, including that of the boards and its accessories.

If you are assembling medical devices not provided by the bed manufacturer, you must check the conformity of the assembly and make the CE declaration of the new medical device.

The electric parts (jack, supply box, wired control, etc.) shall only be repaired by the manufacturer Linak.

The bed is not suitable for use with an inflammable anaesthetic mixture with air or oxygen or nitrous oxide.

The loads permitted (see bed characteristics) must be distributed evenly over the bed base.

Do not activate all the motors at the same time when the patient is in the bed (only one motor is authorised at one time, except elevation by 2 motors or simultaneous function).

After each use and while care is being administered to the patient, the brakes must be activated. We recommend putting the bed in its low position after every use and while the patient is resting, to reduce the height of falls by a confused or agitated person. Remember to lock the function(s) (if the option is available).

On change of height or angle of the parts of the bed, make sure that there are no objects and no parts of the patient's or carer's body caught between the bed, the boards, the accessories and the ground or between the boards and base or between the cross braces.

Do not sit down on the side of the back rest or leg rest if this is not flat.

In the case of a prolonged more than 50 ° tilt bust semi-sitting position, it is recommended to vary the position of the person in bed every 2 hours.

When the bed is being moved, keep the power lead well away from the ground and wheels.

When use of an adaptor, extension lead or connection plug proves necessary, you must check that its characteristics are suitable for the bed.

Connection to the supply box must be done using a mains complying with the standards in force and corresponding to a voltage of use of 230 V.

The mains plug must be disconnected before the bed is moved.

Do not pull on the mains leads to disconnect the mains plug.

During any handling, try not to catch the leads of the motors and remote control and do not get them knotted.

The wired control must be hooked to the headboard when not in use.

In the case of the use of infrared remote control(s), WINNCARE allows the establishment of a single bed in the same room (or in a close environment) or a second bed only if the infrared options of 2 beds concerned are different (I **and** I1).

The condition of the leads must be checked frequently. If the slightest modification is observed, the person in charge for maintaining the bed must be contacted to carry out the necessary repairs.

If repairs are required, the person in charge of maintenance must be contacted.

For greater safety, some side rails can be adapted (see accessories). Side rails should not be used to manipulate or move the medical bed. To assist patient mobility, it is possible to fit a Mobility Aid System (S.A.M.TM).

For assistance, if necessary, in mounting, operation or maintenance or to report unexpected operation or events, call your supplier or Winncare.

The cleaning instructions recommended must be complied with.

Only use original parts and accessories supplied by WINNCARE to guarantee safety and maintain product conformity. The bed must not be modified.

Abnormal use of the bed may damage it or cause accidents to users, in which case the warranty shall be annulled. Abnormal use means failure to comply with the precautions for use, maintenance instructions and other uses not related to the bed's normal purpose, such as: use of the bed by several people at the same time (except DUO DIVISYS bed), use outdoors, moving the bed on a slope that is steeper than 10°, etc.

Put the bed in the designated room, foreseeing an appropriate perimeter of use for the different functions (variable height, TR, etc.), especially if the bed has a lifting pole or side rails. Check that there is sufficient ceiling height if a lifting pole is fitted.

Brake the wheels.

The mains socket should remain accessible to enable the bed to be disconnected quickly.

Plug in the power lead, checking that the mains comply with the standards in force and that it is suitable for the supply box voltage.

Also ensure that the power lead, the remote control lead as well as the cables of possible other devices are positioned correctly to prevent any risks of getting caught between the moving parts of the bed.




- Check that the bed operates properly after installing it in accordance with the check-list appended in this document. (Test all of its functions)

- The patient is a planned operator of the bed. Users must be trained in how to use the equipment.

- Inform the patient and his visitors of the safety instructions to be observed.

3.2. Electrical characteristics

3.2.1. Electrical data

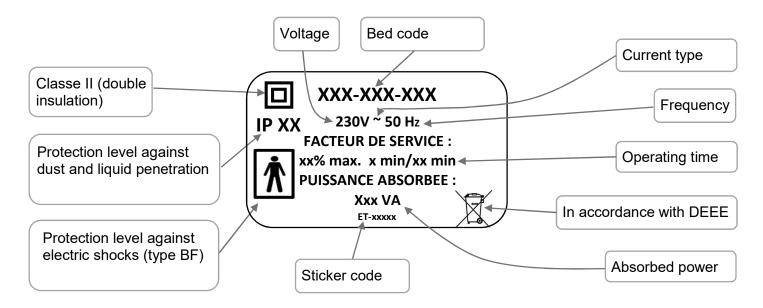

	TY	ΈE	PROTECTION INDEX	VOLTAGE	FREQUENCY										
LINAK actuator	LA27 / LA24 / LA34 / LA40								IP 66	24V DC	-				
Supply box	CA40 / CB6 / CB16 / CO61 / CO41												IP 66	230V AC	50 Hz
Connection box	M	JB	IP 66	24V DC	-										
Operator's side control console	ACC		IP 66	24V DC	-										
Operator's mobile control console	ACO		IP 66	24V DC	-										
Wired control	HB72	/ HB74	IP 66	24V DC	-										
Lockable wired control	HL72	/ HL74	IP 54	24V DC	-										
Flexible arm control	FF	ър	IP 66	24V DC	-										
Lockable and backlit wired control	HB	02X	IP 66	24V DC	-										
Battery	BA1812- / BA21		IP 66	24V DC	-										
Infrared control	HB21	Transmitter	Ť	3V DC											
	ΠΟΖΙ	Receiver	IPX4	34 00											
Night light	UBL		IPX6	24V DC											

Keep dry



Maximum operating time: Read the recommendations on the electrical label on the bed.

3.2.2. Protection level against dust and liquid penetration

Index	1 st number (decade) Protection against solids	2 nd number (unit) Protection against water intrusion
0	No protection.	No protection.
1	Protected against solid bodies greater than 50 mm.	Protected against vertical drops of water drops.
2	Protected against solid bodies greater than 12,5 mm.	Protected against falling drops of water up to 15° from the vertical.
3	Protected against solid bodies greater than 2,5 mm.	Protected against rain water up to 60 ° from vertical.
4	Protected against solid bodies greater than 1 mm.	Protected against splashing water from all directions.
5	Protected against dust and other microscopic residues.	Protected against jets of water from all directions at the lance (6.3 mm nozzle, distance 2.5 m to 3 m, flow 12.5 I / min $\pm 5\%$).
6	Totally protected against dust.	Protected against strong jets of water from all directions to the lance (12.5 mm nozzle, distance 2.5 m to 3 m, flow 100 l / min \pm 5%).

3.2.3. Electromagnetic compatibility

The bed will not move automatically when subject to electromagnetic disturbances within the limit of the values indicated below.

		Manufac	cturer's declarati	on and guide – ele	ctromagnetic emissions			
The medical bed (see refe	rences in contents) ha	is been de	signed for use in t	the electromagnetic an environment.	environment specified below. The user should ensure that it is used in such			
Emissions test		Complia	ance	ELECTROMAGNETIC ENVIRONMENT - GUIDE				
RF emissions Group 1 CISPR 11				The medical bed (see references in contents) uses RF energy only for its internal functions Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.				
RF emissions CISPR 11	Class B			The medical bed (see references in contents) can be used in all domestic environments, including the directly connected to the public low-voltage power supply network that supplies buildings for domes purpose.				
Harmonic emissions EN 61000-3-2				[]				
Voltage fluctuations / Flicke EN 61000-3-3	er Applicabl	e						
RF emissions CISPR 14-1	Complia	nt		The medical bed (s equipment.	ee references in contents) has not been designed for connection to other			
The medical hed (see refe	rences in contents) ha			-	ectromagnetic immunity environment specified below. The user should ensure that it is used in such			
		o been de		an environment.				
IMMUNITY TEST	IEC 60601 Severity lev		COMPLIANCE LEV	/EL	ELECTROMAGNETIC ENVIRONMENT - GUIDE L			
Electrostatic discharge EN 61000-4-2	\pm 6 kV contact \pm 8 kV air	$\pm 8 \text{ k}$ // pir			Floors should be wood, concrete, or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.			
Electrical fast transients EN 61000-4-4	±2 kV for feeders ±1 kV for input/output						The quality of the main power supply must be the same as for a typical commercial or hospital environment.	
Surges EN 61000-4-5	Differential mode \pm Common mode ± 2		Differential mode ± 1 kV		The quality of the main power supply must be the same as for a typical commercial or hospital environment.			
Voltage dips, short interruptions and voltage	 <5% U_T - for 10 / 40% U_T - for 100 		 <5% U_T - for 40% U_T - for 		The quality of the main power supply must be the same as for a typical commercial or hospital environment.			
variations EN 61000-4-11	 70% U_T - for 500 <5% U_T - for 5 s 	ms	 70% U_T - for <5% U_T - for 		If the user of the medical bed (see references in contents) wants to be able to continue to use the bed during interruptions in the main power supply, it is recommended that the bed be powered by a converter or battery.			
Power frequency magnetic field (50/60 Hz)	3 A/m		3 A/m		Power frequency magnetic fields should be at levels characteristic of a location in a typical commercial or hospital environment.			
NB: U_T is the nominal value	e of power voltage app	olied during	g the test.					
		Manufa	cturer's declarat	tion and guide - ele	ectromagnetic immunity			
The medical bed (see refe	rences in contents) ha	is been de	signed for use in t	the electromagnetic an environment.	environment specified below. The user should ensure that it is used in such			
Immunity test	IEC 60601 Severity level		MPLIANCE LEVEL		Electromagnetic environment - Guide			
				bed (see referen	bile RF communications equipment should be used no closer to the medical ces in contents), including leads, than the recommended separation ted using equations applicable to the frequency of the transmitter.			
Conducted RF	3 Vrms	3 \	1		separation distance			
EN 61000-4-6	150 kHz to 80 MHz		,	$d = 1,17\sqrt{P}$	150 kHz to 80 MHz			

FN 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3 V/m 80 to 800 MHz	$d=1,17\sqrt{P}$ 80 MHz to 800 MHz					
			$d=2,33\sqrt{P}$ 800 MHz to 2.5 GHz					
		2 to 2.5 GHz 10 V/m 800 MHz to 2 GHz	where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d the recommended separation distance in meters (m). The field strengths transmitted by fixed RF transmitters, determined by an electromagnetic measurement of the site ^a , must be less than the conformity level in each range of frequencies.					
			Disturbances can occur near devices m	narked with this symbol:				
Note 1 At 80 MHz and 800	MHz, the upper frequency	/ range applies.	I					
		• • • •	pagation is affected by absorption and re	flection from structures, objects and people.				
compliance level above orienting or relocating th	, the normal operation of t	he bed must be checke	ed. If abnormal performance is observed	ences in contents) is used exceeds the applicable RF , additional measures may be necessary, such as re-				
The medical bed (see reference prevent electromagnetic interfe	ces in contents) is intended erence by maintaining a min	for use in the electromag mum distance between p	oortable and mobile RF communications equ	edical bed (see references in contents) urbances are controlled. The user of the bed can help ipment (transmitters) and the bed as recommended				
below, according to the maxim			TO FREQUENCY OF TRANSMITTER M					
Rated maximum power of		50 kHz to 80 MHz	80 MHz to 800 MHz	800 MHz to 2.5 GHz				
W		$d = 1,17\sqrt{P}$	$d = 1,17\sqrt{P}$	$d = 2,33\sqrt{P}$				
0.01	0.12 / 0.11	6	0.12 / 0.116	0.23 / 0.233				
0.1		0.37 / 0.316	0.37 / 0.366	0.74 / 0.736				
1		1.17 / 1.16	1.17 / 1.16	2.33 / 2.33				
		3.70 / 3.66 3.70 / 3.66 7.37 / 7.36						
10		3.70 / 3.66	3.70 / 3.66	7.37 / 7.36				
10		3.70 / 3.66 11.70 / 11.6	3.70 / 3.66 11.70 / 11.6	7.37 / 7.36 23.30 / 23.3				

3.2.4. Equipotentiality

Under the head-half of the bed base you will find an equipotentiality socket ①, identified by the label ②, enabling you to connect any electromedical devices. The leads of these devices must pass through the head end and not the sides.

	PHISE D'EQUIPOTENTIAUTE	
	Label 2	
	A V	
a second		
Equipotentia	ality 🛈> 🚺	


4. BED BOARDS 120/140/160cm WIDTH COMPATIBLE

Item	Width 120	Width 140	Width 160
MEDIDOM II (2)	P319-00	P320-00	P321-00
WINNEA	P322-00	-	-
MEDIDOM II ELEGANT (2)	-	P324-00	P325-00
Louis Philippe (1)(2)	P416-00	P417-00	P418-00
Auzence II	P612-00	P613-00	P614-00
Abélia II	P617-00	P618-00	P619-00
CARMEN II with wooden barriers (2)	P621-00	P622-00	P623-00
CARMEN II	P626-00	P627-00	P628-00
ABELIA II Aluminum side rails (1)	P640-00	P643-00	-
STYLVIA Aluminum side rails (1)	P641-00	P644-00	-
NOVIDA Aluminum side rails (1)	P642-00	P645-00	-

(1) Bed board incompatible with the XPRESS transport kit

(2) Long pan option incompatible with the XPRESS transport kit
 
> Mattress



Observe the mattress dimensions prescribed. See user guide

Width of base in cm	Characteristics of compatible mattresses
120	Width 116 cm minimum with a high resilience foam of 34Kg/m³ minimum
140	Width 136 cm minimum with a high resilience foam of 34Kg/m ³ minimum
140 DUO	Width 68 cm minimum with a high resilience foam of 27Kg/m ³ minimum
160 DUO	Width 78 cm minimum with a high resilience foam of 27Kg/m³ minimum
160 DUO option V	1x Width 68 cm minimum + 1x Width 88 cm minimum, with a high
	resilience foam of 27Kg/m³ minimum



Incompatible mattresses can pose RISKS.



There must be at least 220 mm between the top of the side rail and uncompressed and no therapeutic mattress surface. It will be advisable to tend towards this specification in the case of the use of a therapeutic mattress.

Ref.	Des.	Max weight (kg)	AERYS 120	DIVISYS 120	DIVISYS 140	XPRESS 120	XPRESS 140	DUO 140	DUO 160
A1700xx	IV stand, 2 hooks	8	•	•	•	•	•	•	•
A8400xx	Telescopic IV stand, 2 hooks	8	•	•	•	•	•	•	•
A193-00	Chrome-plated wall-mounted basin holder	NA	•	•	•	•	•	•	•
A230-00	Remote-control lead holder	NA	•	•			•	•	•
A260-00	Epoxy urinal holder	NA		•	•	•	•	•	•
A551-00	Excelys wall stop	NA		•	•				
A553/555-00	Skirt for 120/140 and L.P beds	NA		•	•				
A554/556-00	Skirt for 160 and L.P beds	NA						•	•
A575-00	Support handle	NA	•	•	•	•	•	•	•
A579/580/ A581- 00	Wooden side rails (2)	NA	•1	•1	•1	•1	•1	•1	•1
A613-00	S.A.M. BLOCK	NA	•	•	•	•	•	•	•
A616/617-00	S.A.M. ACTIV	NA	•	•	•	•	•	•	•
A622-00	Angled lifting pole	75	•	•	•	•	•	•	•
A623-00	Chromed angled lifting pole	75	•	•	•	•	•	•	•
A631-00	Bed base extension L140 cm	NA			•		•	•	
A632-00	Bed base extension L160 cm	NA							•
A637/638-00	EPOXY side rail	NA	•	•	•	•	•	•	•
A639/640-00	Chrome barrier	NA	•	•	•	•	•	•	•
A645/646-00	S.A.M. EVOLUTION	NA	•	•	•	•	•	•	•
A647/648-00	S.A.M. ERGONOM PLUS	NA	•	•	•	•	•	•	•
A649/650-00	S.A.M. ERGONOM	NA	•	•	•	•	•	•	•
A651/652-00	S.A.M. ERGONOM LIGHT	NA	•	•		•		•	•
A653-00	Kit for side loading bed Aerys	NA	•						
A660-00	Bed base extension L120 cm	NA	•	•		•			
A663-00	Aerys 120 wall stop	NA	•						
A665/666-00	Aluminum half side rails	NA	•	•	•	•	•	•	•
A673-00	Long universal pan	NA	•1	•1	•1	•1	•1	•1	•1
S0200	Stainless steel intravenous stand on base	8	•	•	•	•	•	•	•
Y0300	Lifting pole on U shaped base, fixed height	75	٠	•	•	•	•	•	•

1 incompatible with bed base extension



Only accessories and boards supplied by *WINNCARE* guarantee you a compatibility with our products.




Incompatible accessories and boards can pose RISKS

6. USE

6.1. Purpose of the bed

- XXL X'Press & Divisys beds, depending on their configurations, are intended for home treatment (application environment 4).
- XXL X'Press & Divisys beds are intended for persons whose size is greater than or equal to 146 cm, with a weight greater than or equal to 40 kg and a body mass index (BMI) greater than or equal to 17.

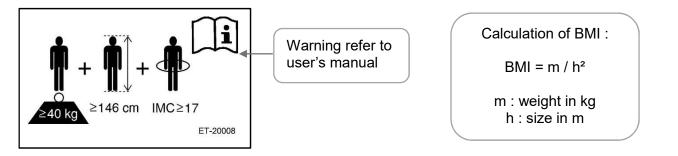

6.2. Specific precautions for use


The bed should not be used as a stretcher. Moving the bed with weight requires 2 people.

The kickstand and transport kit can be removed only if the bed is placed on the ground on its wheels. It is imperative to raise the kickstand on the ship kit before transporting the bed.

6.2.1. Residual risks


DANGER	RESULT	REQUIREMENTS FOR THE USER
Trapping	Hands pinched	Handle legsrest or backrest up by handles or at specified locations
Trapping	Crushing body or object	Before lowering the bed, check that the area between the bed and the floor is free
Trapping	Crushing body or object	Check before operating the central brake pedal that the area between the pedal and the floor is free

6.3. General description

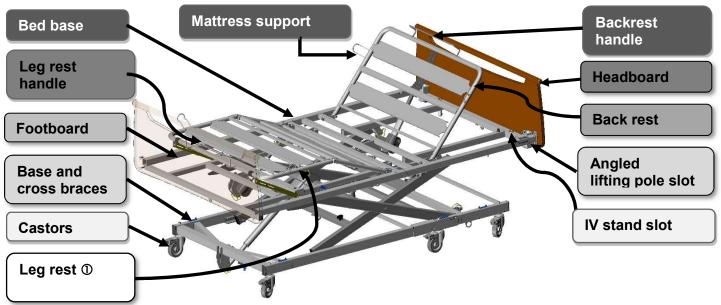



0 Manual crank or electric folding leg rest depending on version.


6.4. Technical characteristics

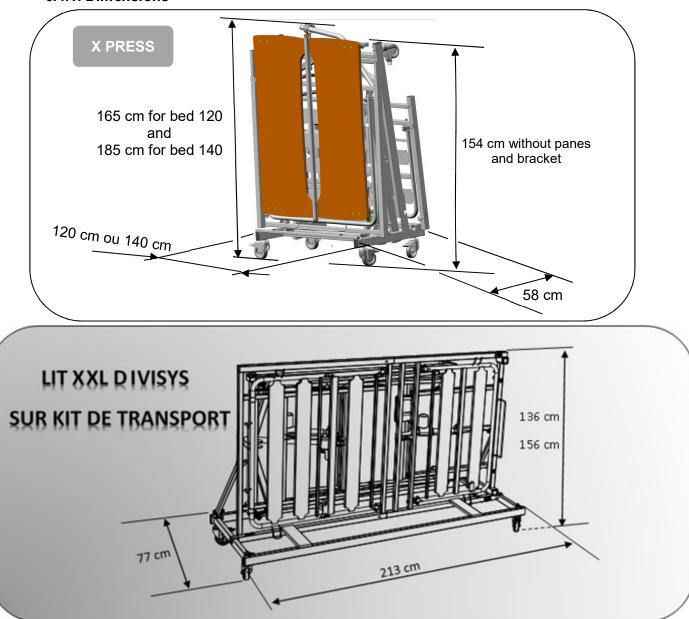

6.4.1. Dimensions

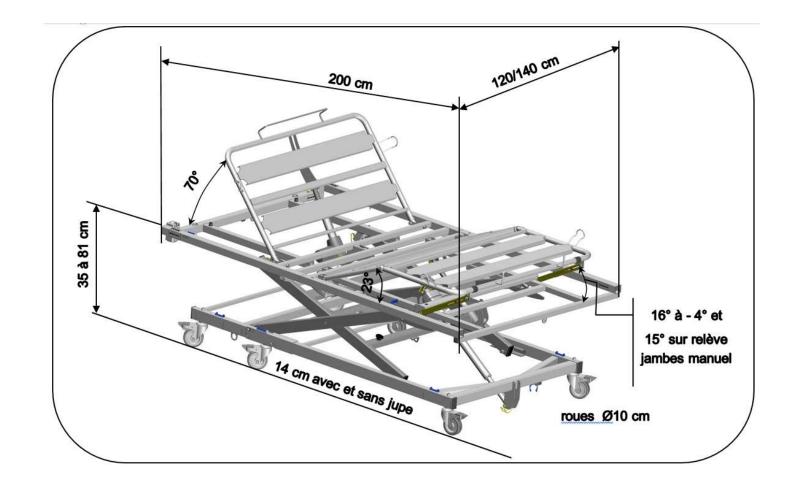

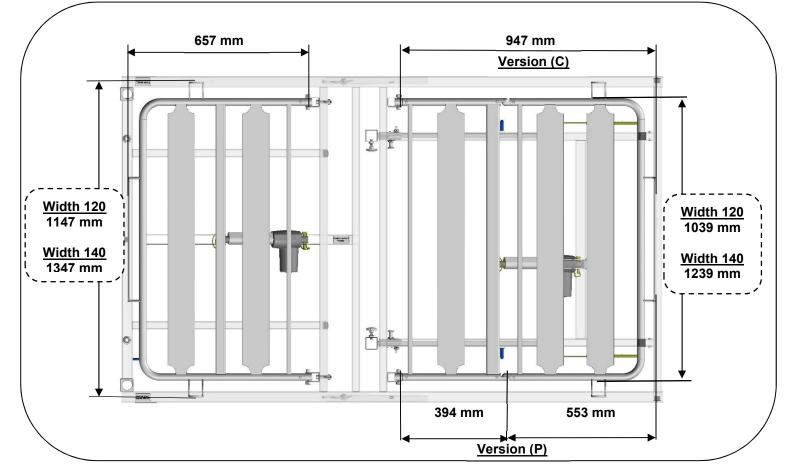

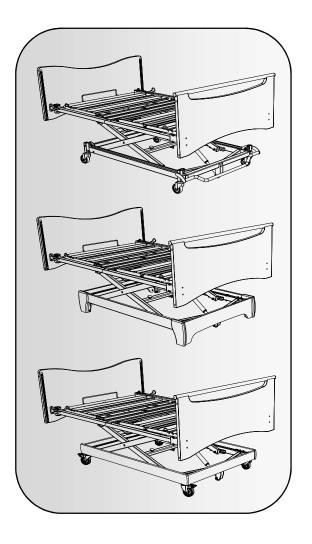

DIVISYS BED WITH CENTRALIZED BRAKING OPTION

DIVISYS BED WITH OPTION SKIRT ON FOOT

DIVISYS BED WITH ACCESSORY SKIRT ON WHEELS

6.4.2. Weight


Safe operational load of the bed: 315 kg (Patient 270 kg, Mattress 30 kg, Accessories 15 kg).


	Base and brace	Head-end bed base	Foot-end bed base	TOTAL
Bed 120 XPRESS (C)	55 kg	25 kg	29 kg	109 kg
Bed, version manual crank leg rest				
Bed 120 XPRESS (P)	55 kg	25 kg	35 kg	115 kg
Bed, version electric folding leg rest				
Bed 140 XPRESS (C)	55 kg	28 kg	31 kg	114 kg
Bed, version manual crank leg rest				
Bed 140 XPRESS (P)	55 kg	28 kg	39 kg	122 kg
Bed, version electric folding leg rest				
Bed 120 DIVISYS (C)	47kg	25 kg	28 kg	100 kg
Bed, version manual crank leg rest		051		
Bed 120 DIVISYS (P)	47 kg	25 kg	34 kg	106 kg
Bed, version electric folding leg rest	47.1	00 J	00 I	
Bed 140 DIVISYS (C)	47 kg	28 kg	30 kg	105 kg
Bed, version manual crank leg rest	47.1	00.1	00 I	
Bed 140 DIVISYS (P)	47 kg	28 kg	38 kg	113 kg
Bed, version electric folding leg rest				


6.4.3. Noise

The measurement of the maximum audible sound power in accordance with ISO 3746 is 49 dB(A).

6.5. Electrical connection diagram

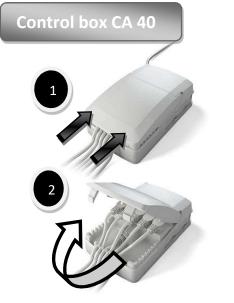


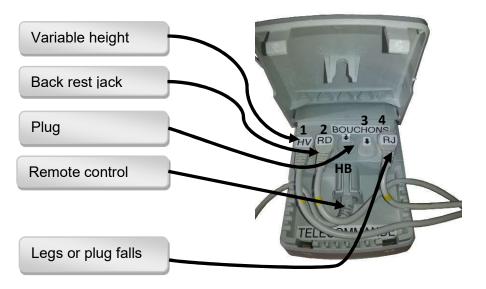

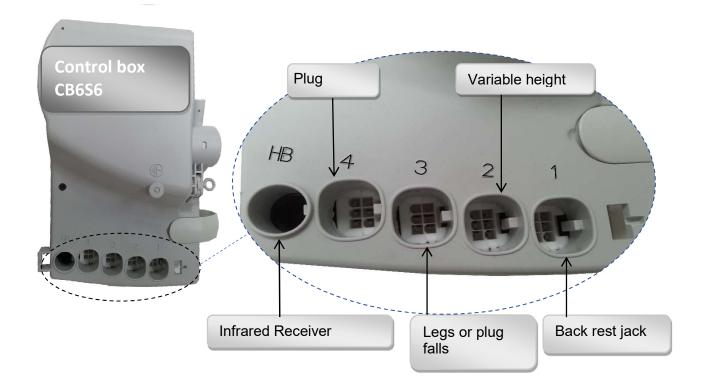


6.6. Remote control

Carry out a test cycle when the bed is empty to familiarise yourself with the bed functions.

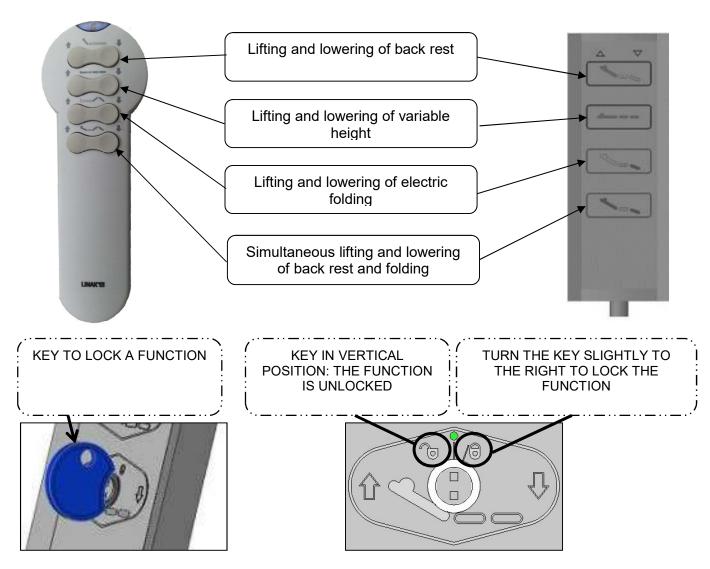


6.6.1. Lockable remote control HB02x (lock or unlock)

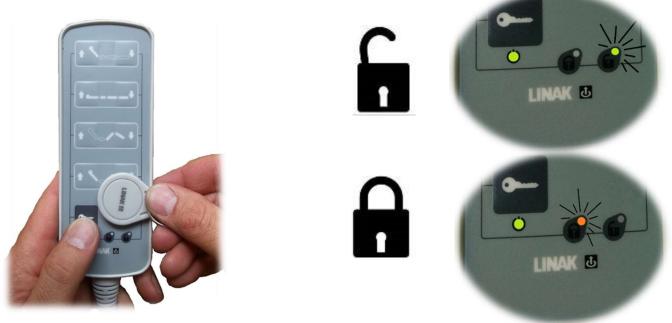


6.7. Braking

6.7.1. Separate braking

Check that the wheels are locked by trying to move the bed. If this is not done, the patient or another person who leans on the bed may fall.

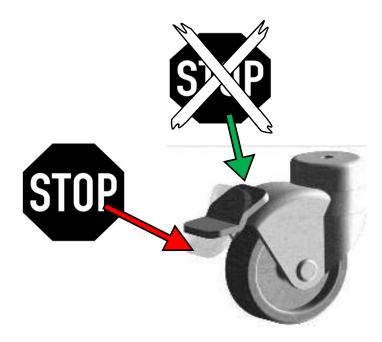



6.7.2. Centralized braking

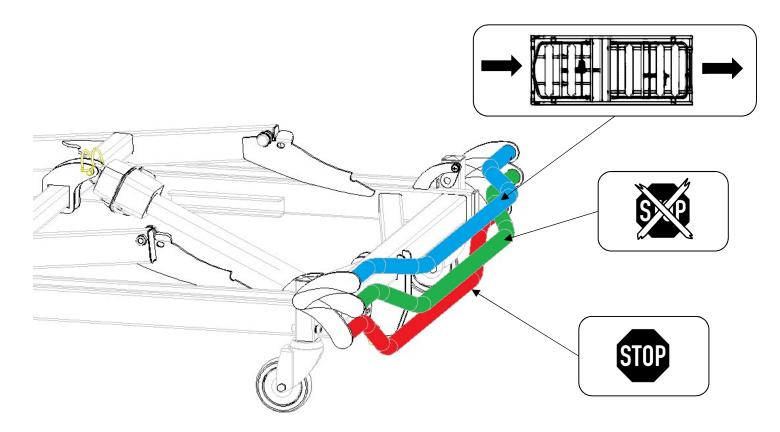



7. ASSEMBLY AND DISASSEMBLY


7.1. Assembling the bed XXL XPress

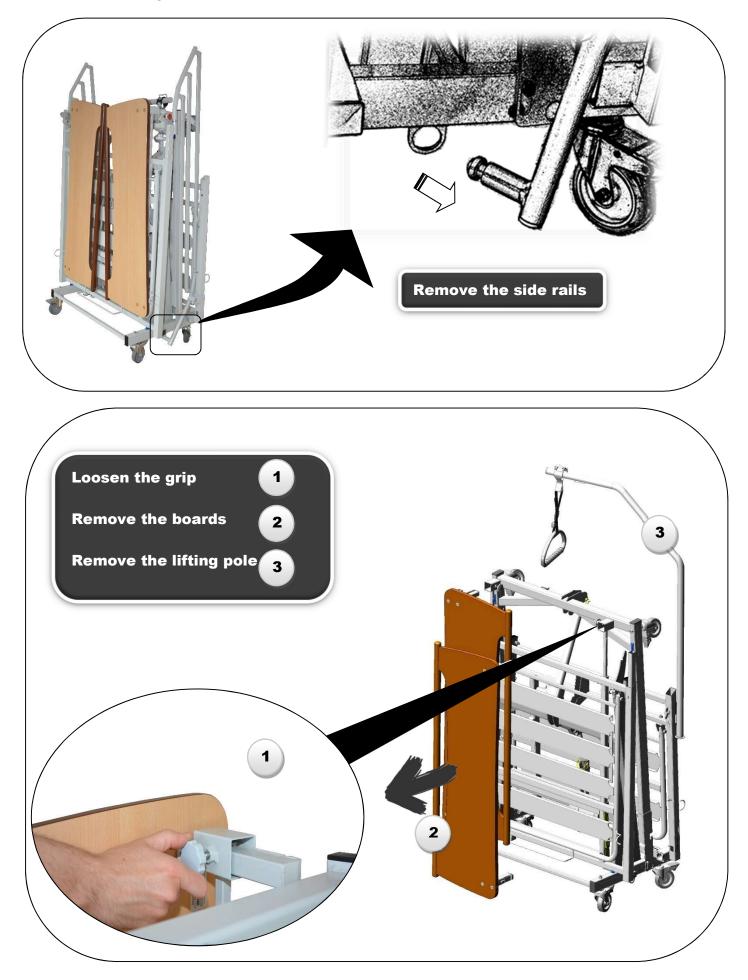

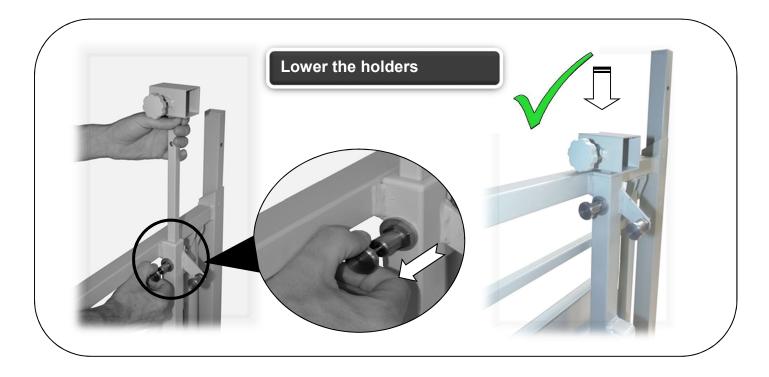

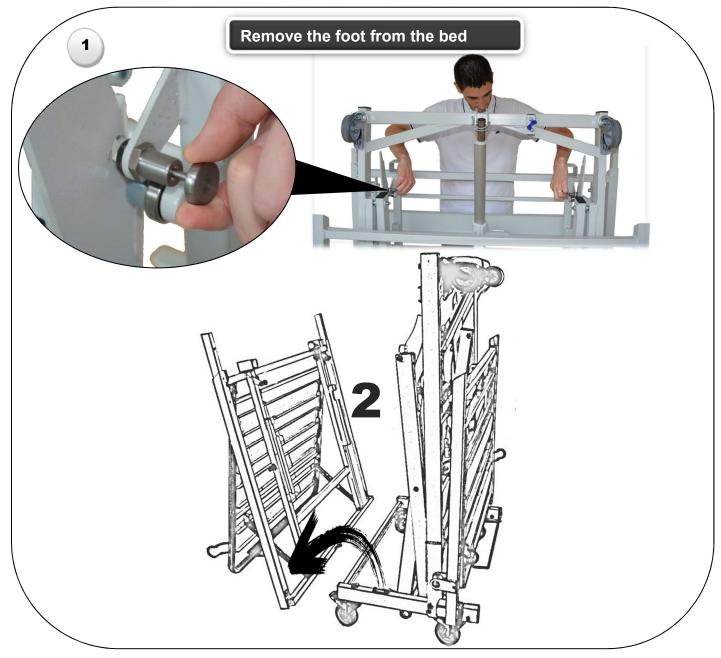


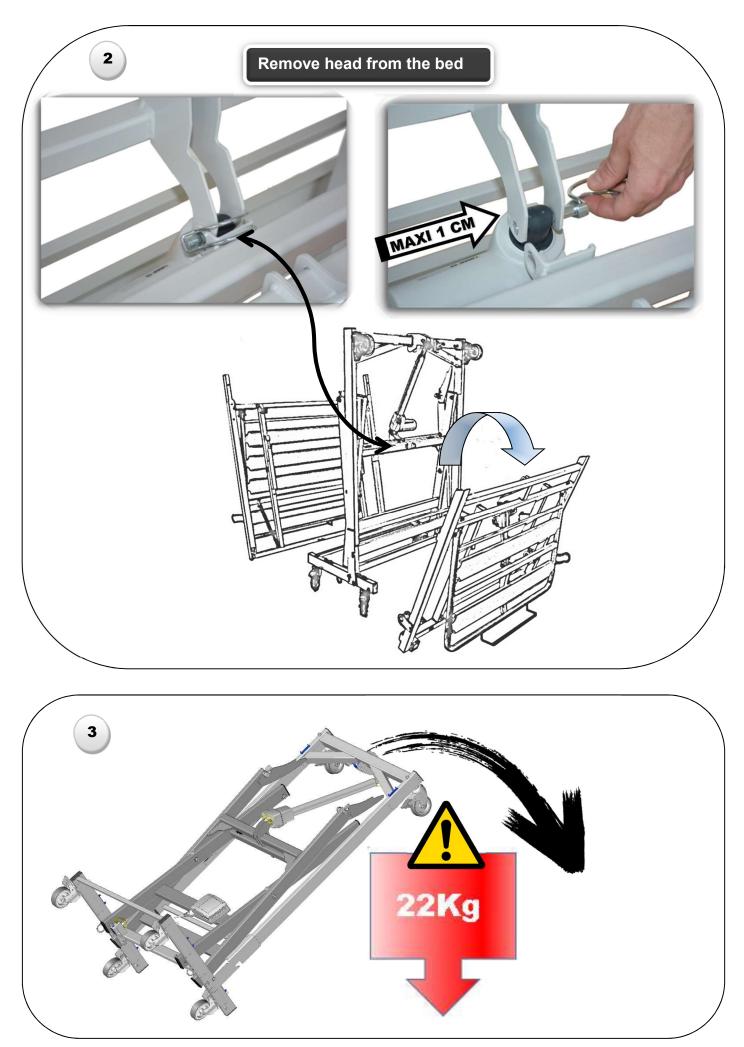


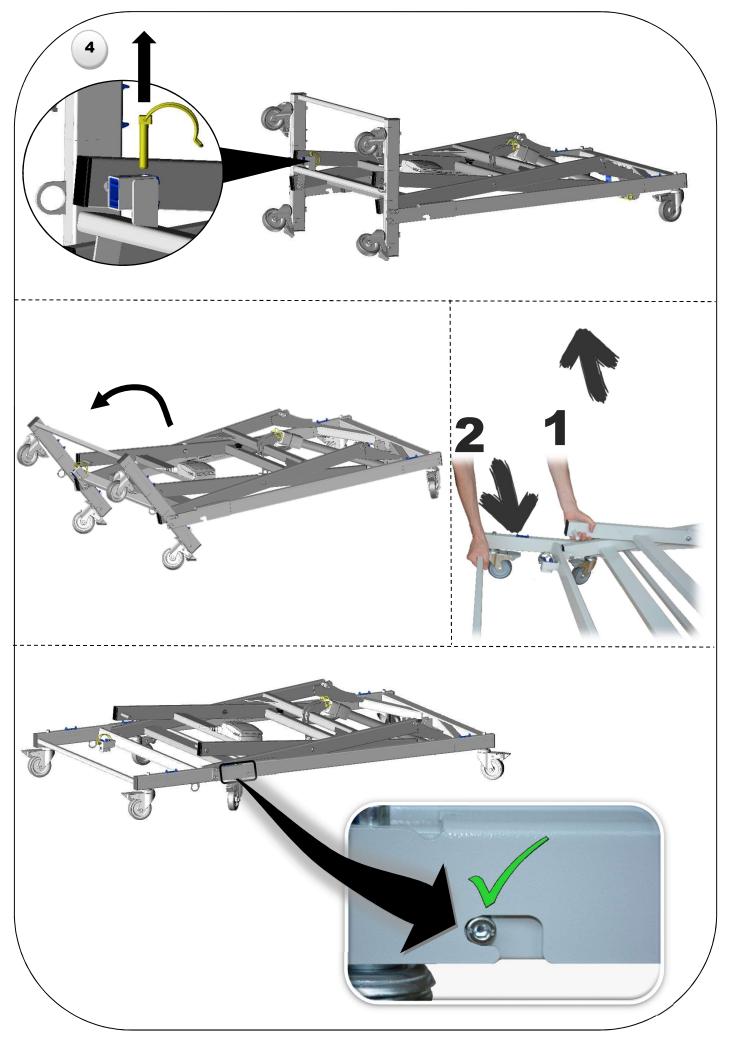



7.2. Mounting XXL Xpress bed and XXL bed DIVISYS



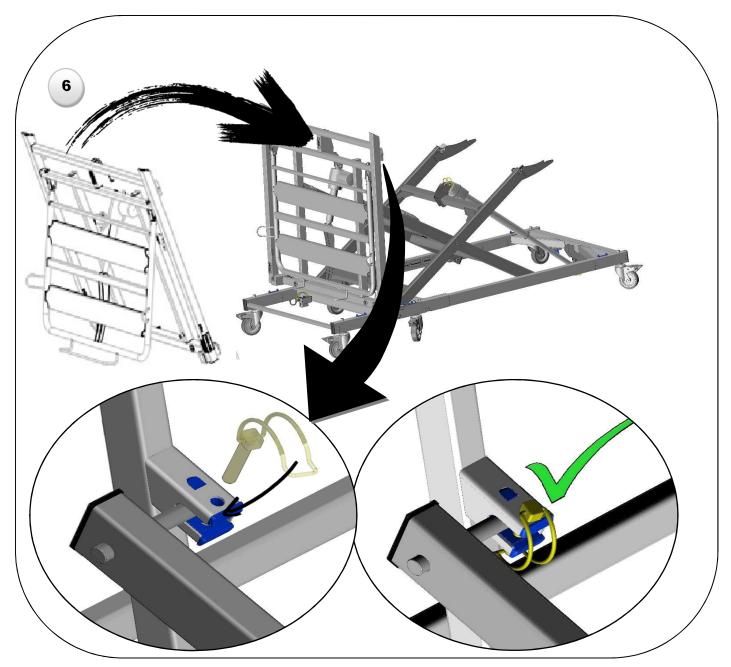

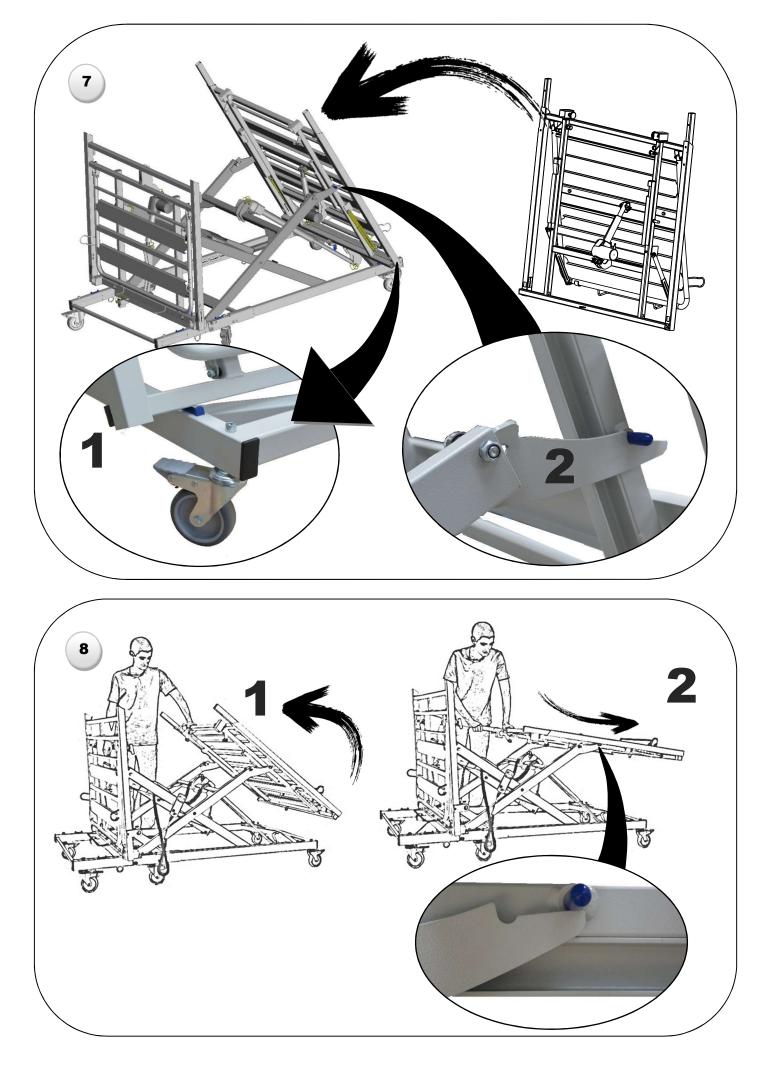


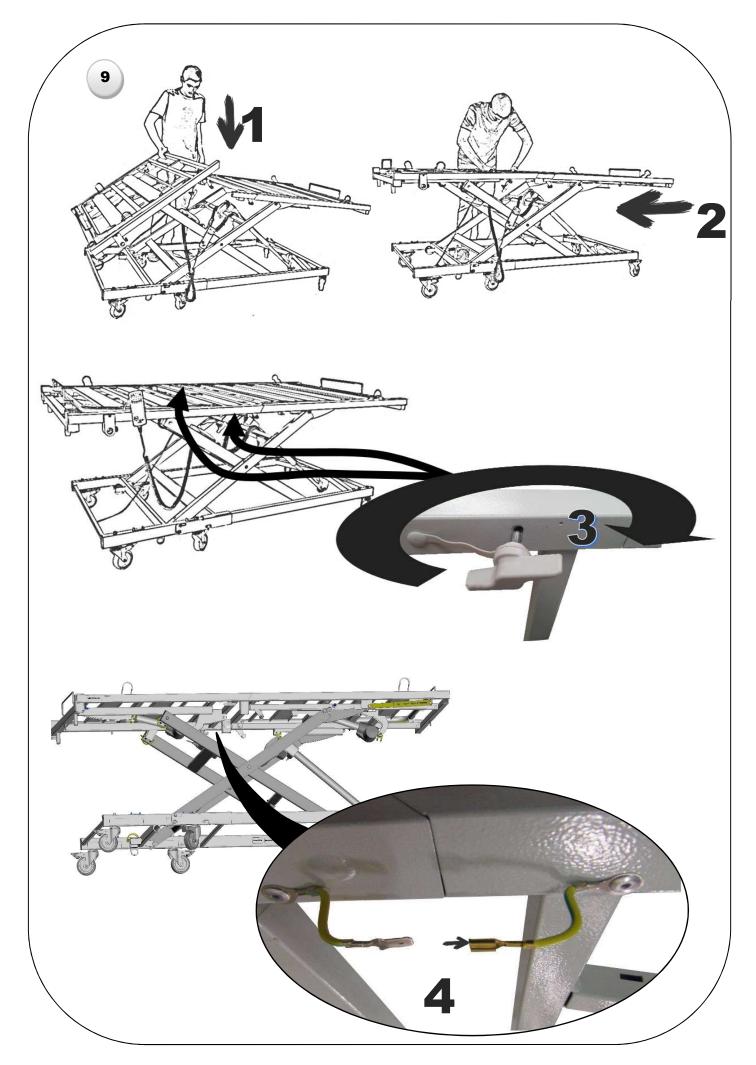


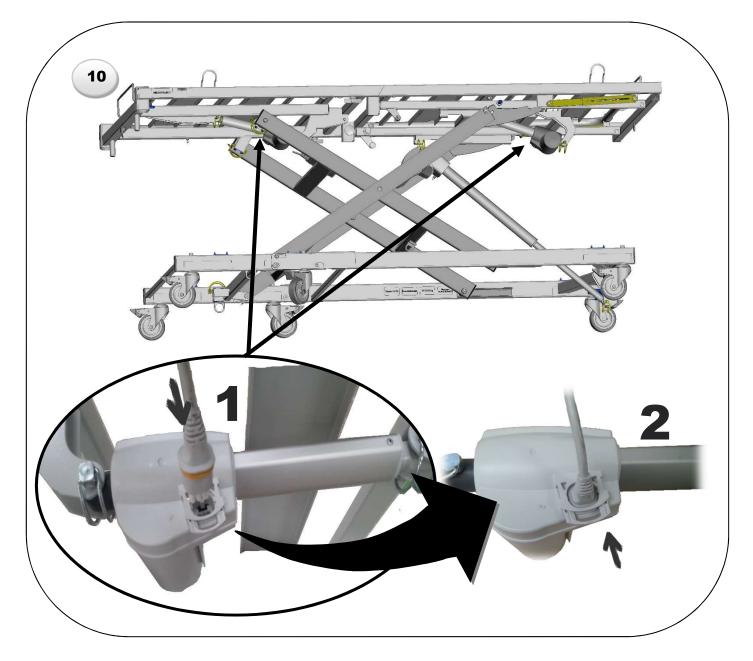

7.3. Dismantling

Repeat the operations in the reverse order 10; 9; 8; 7; 6 and 5 $\,$

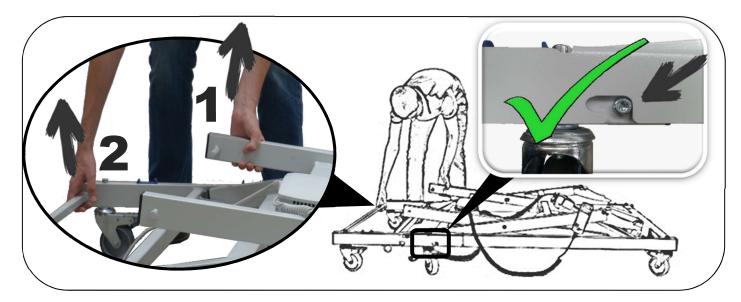

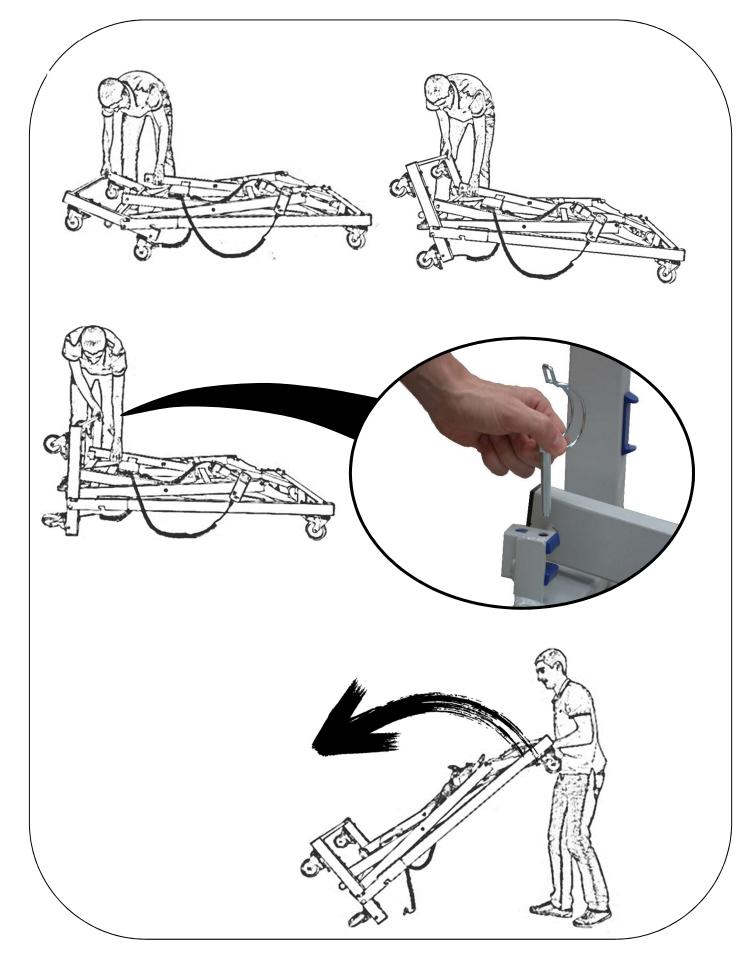

Finish by repeating operations 2 and 1.in the reverse order.


8. OPERATION OF THE SLEEPING SURFACE

8.1. Back rest

8.1.1. Standard back rest

In the event of a power cut or failure, flatten the back rest as follows :

- a) Disconnect the power supply.
- b) Dismantle the headboard ①.
- c) Stand at the head of the bed and take hold of the back rest handle 2 with one hand. Push or lift to compensate the pressure exerted by the patient and unhook the clip 3 by the connecting rod with the other hand. The back rest jack will then pivot downwards.
- d) Put the headboard back.

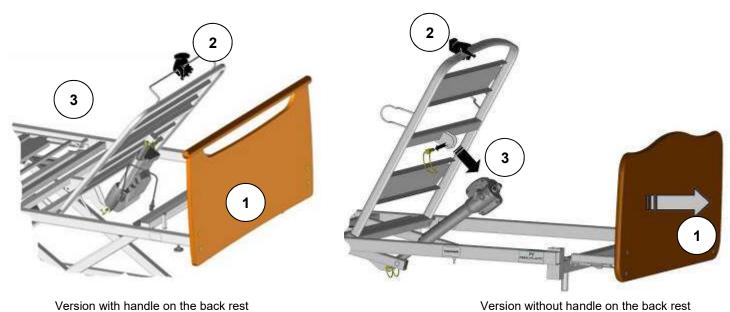


Version with handle on the back rest

8.1.2. Back rest with translation


Same operation for flattening as the standard back rest.

The back rest with translation avoids to slip forward..

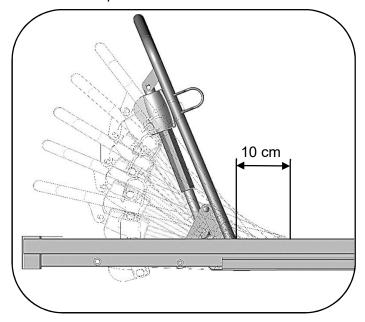

8.1.3. Emergency release of the back rest (Cardio Pulmonary Resuscitation)

Grasp the back rest with one hand.
 With the other hand, activate one of the two handles on the back rest while lowering.
 If the handle is released, the back rest will stop moving.

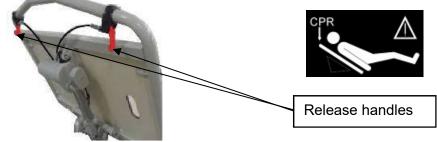



To reactivate the cardiopulmonary resuscitation system of high-load beds (270Kg), actuate the backrest electric actuator to its minimum position by pressing the down button on the remote control.

8.2. Leg rest

8.2.1. Leg rest with manual crank (C)

To lift, lift the leg rest using the handle at the end.

To lower, relieve the leg rest slightly or to its maximum with the hand to release the catch, then lower the leg rest.

8.2.2. Leg rest with electric folding (P)


Memory folding: This function keeps a position of the tibia section horizontal when the jack is activated upwards. To use this function, the 1st crank catch must be engaged when the leg rest is flat. Folding without memory : the end of the tibia section stays in contact with the bed base.

9. INSTALLATION OF ACCESSORIES

9.1. Boards

Installing a bed board :



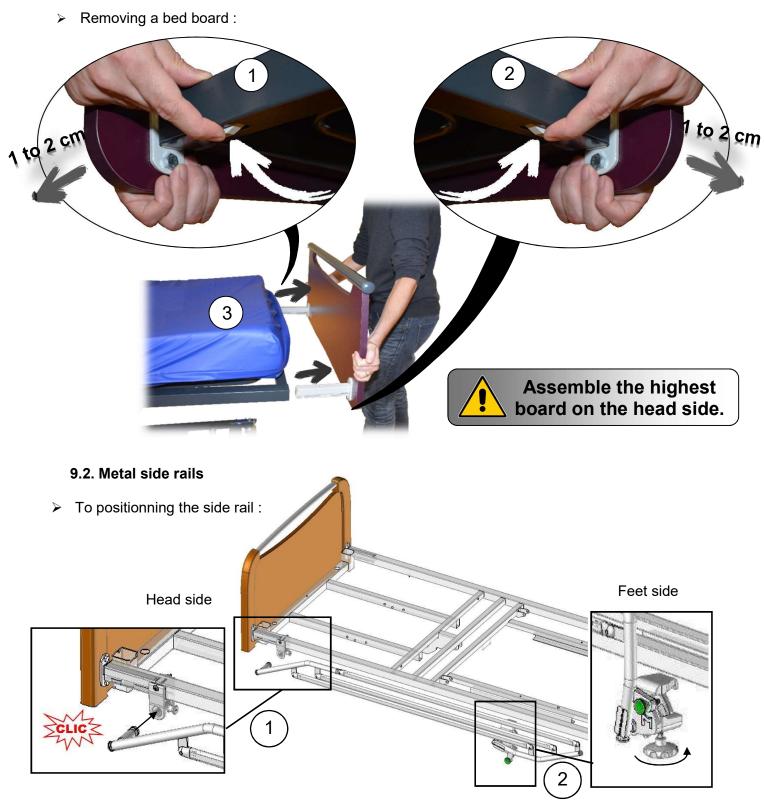


①Insert amount of the side rail folded in the grip jaw on the head side of the bed to hear "CLIC".

^②Tighten the Rondo screws of the grip jaws on the bed base.

To remove the side rail folded, loosen the rondo on the feet side ② and then release the amount ① without removing, pulling the index finger on the side of the jaw on the head side. Take the side rail, a hand at each end to remove it completely.




If the side rail is poorly positioned, safety of the patient may be endangered or a malfunctioning may occur. The side rails must not be used when the patient is a child (under 12) or if s/he is too small (\leq 146 cm).

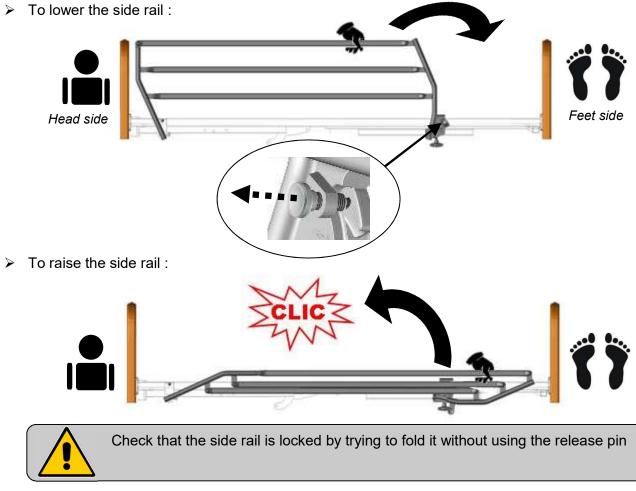

9.3. Wooden barriers


See the attached instructions for fitting the wooden side rail.

- ➢ To raise the side rail.
- Raise the top side rail with both hands until it locks.
- ^② Check that it is properly slot in.
 - > To lower the side rail.
- Raise the top side rail with one hand.
- ²Press on the unlocking button with the other hand.
- ③ Support the rail as it lowers.
- ④ Repeat steps ① to ③ for the other side.

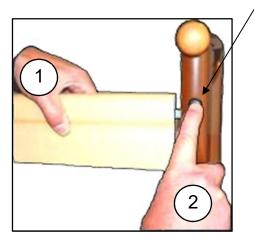



Check that the high guide engage in the right direction in the low guide.

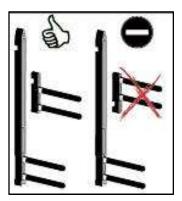


9.4. Aluminum half side rails

See the attached instructions for fitting the aluminum half side rails.


➢ To raise the side rail.

1-In intermediate position :

 Raise the top side rail with both hands until it locks.




^② Check that it is properly slot in by trying to get it down without using the unlocking buttons.

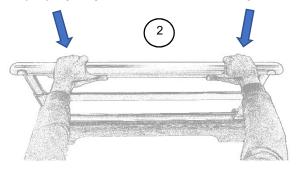


2-In high position :

0 Raise the top side rail with both hands to the top by pushing the unlocking buttons then release them before the high stop.

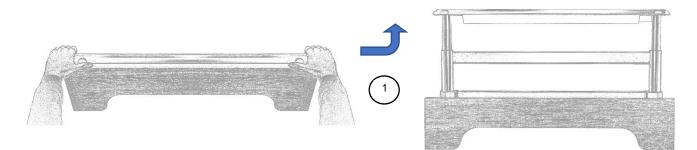


^② Check that the side rail is locked by trying to fold it without using the unlocking buttons.

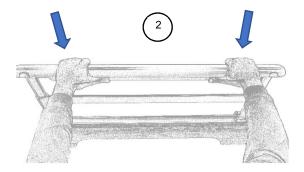


➢ To lower the side rail.

- Raise the top side rail.
- O Press on the two unlocking buttons with both hands.
- ③ Support the rail as it lowers.

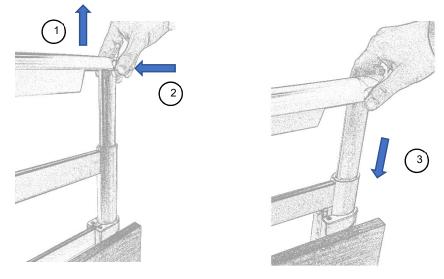


9.5. Angled lifting pole and IV stand

In case of psycho-behavioral problems of the patient, it is necessary to fix the stem to the bed with the screw and the washer provided.

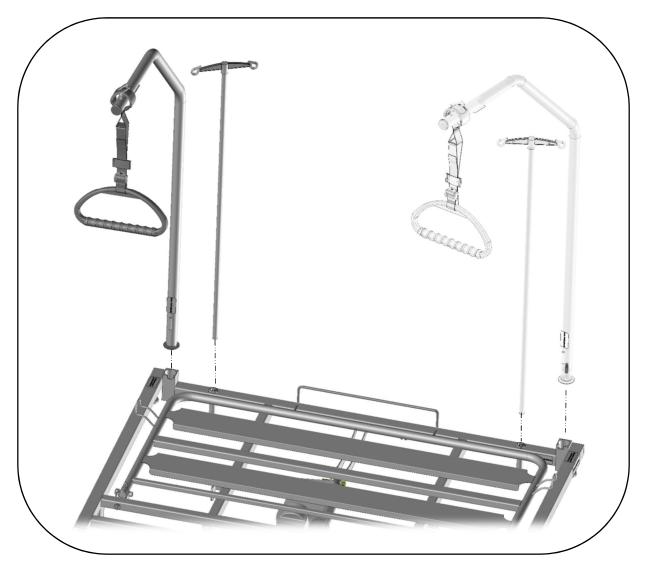

10. MAINTENANCE


No maintenance should be done in the presence of a patient on the bed.

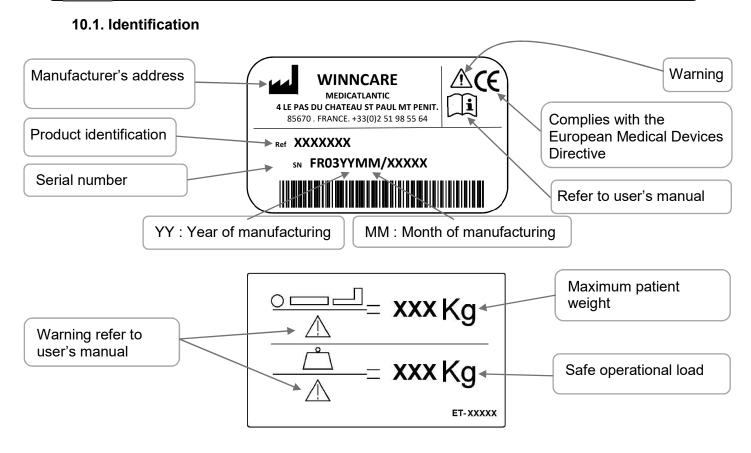

10.2. Instructions for dismantling the motors



- Dismantle when the bed is empty or in the side position.
- If dismantling in any other position, keep a firm hold of the moving parts to avoid any shearing.
- Unblock the safety clips ①, unplug the motor leads, and remove them from the securing seals.
- Put the motors back in place and put in the same direction as at the beginning.

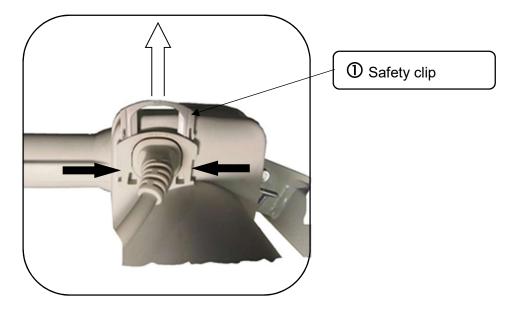

10.3. Maintenance

Quality control of medical beds will be made by technical staff or trained biomedical and taking into account the normal conditions of use specified in the user guide, on a bed equipped with its accessories, including its barriers if necessary.

The bed must be available to perform all quality control at least once a year, but also on special request and corrective maintenance on the performance that could be affected by the intervention. However, to save time this may be associated with preventive maintenance. In this case, it is not useful to make a further examination of already controlled performance.

RECOMMENDATIONS FOR PREVENTIVE MAINTENANCE:

Preventive maintenance should be carried out in accordance with our specifications and at least once a year by the organisation or person who installed the bed.

Between two maintenance sessions and at least once a year, the following should be carried out:

- Verification that the electrical leads are connected all along the metal jambs to prevent shearing of these leads when the variable height is being activated.

- Verification that all of the electrical leads and plugs are in good condition. Replacement if there is the slightest alteration (wear, shearing, damage, etc.).

- Verification of the external appearance (traces of damp and good overall condition of protective covers in particular) and that the motors and jacks function properly.


- Verification that the bed is in good working order (test all functions).

- Verification that the frame, bed base and mechanical joints are all in good condition.

When maintenance is carried out at the patient's home as part of a long-term contract, the installer must also: - Check that the bed is properly installed (check to see that there hasn't been any modification contrary to the safety instructions made by the user since the bed's installation).

- Remind the users of the safety instructions.

- All installation and preventive maintenance operations must be recorded. See table model below. This record must be kept in a designated area throughout the bed's lifetime.

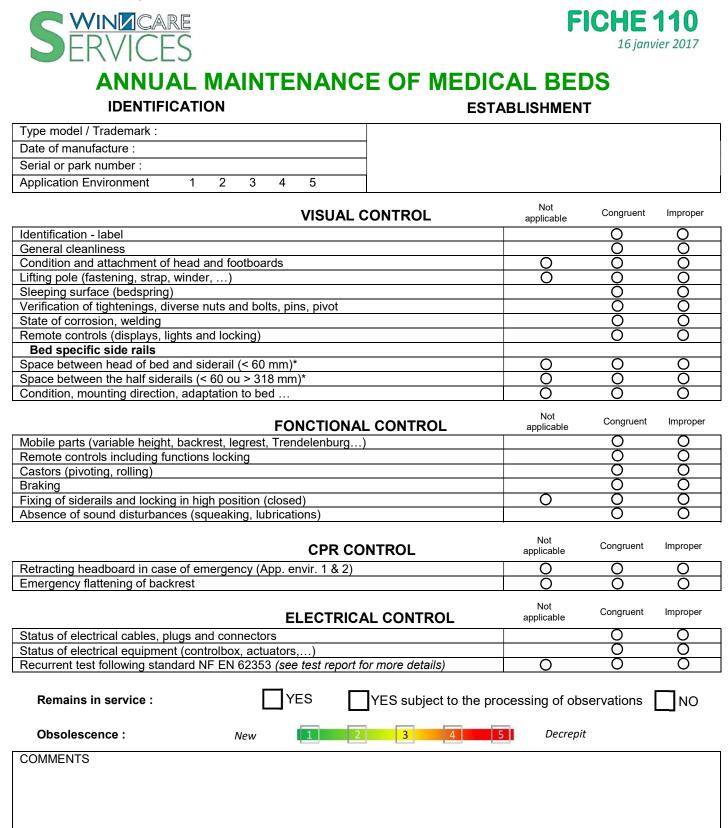

Made on :		
Name :	Signature and stamp of technician	Signature of customer
		*following standard NE EN 60601 2 52

10.5. Cleaning and disinfection

High pressure cleaning, machine cleaning, washing tunnel or jet cleaning is prohibited. Unplug the mains lead.

Check that all the electrical parts are connected together. All the sockets of the supply box must be used or filled, otherwise its watertightness is not guaranteed.

Clean the electric covers of the jacks and wired control by means of a mop impregnated with a detergentdisinfectant product.

The medical bed is a non-critical appliance requiring "Low Level" disinfection.

We draw your attention to the fact that the recommendations below are drawn up according to the rules of good practice but are not a protocol. Contact the hospital hygiene department.

> AIM

To recondition the bed and prevent the transmission of germs from one patient to another. To eliminate all organic soiling by:

- physical action (cleaning)
- chemical action (disinfection)

> INDICATION

Physical and bacteriological cleanliness of the bed and its accessories

EQUIPMENT

Microfiber wipes

Detergent or Detergent-Disinfectant (Surface DD with CE mark) and surface Disinfectant (Chlorine substances, alcohol base < 30%)

Attention: DD products and Javel water must not be used undiluted. A remanence time must be applied according to the disinfectant manufacturer's instructions (the drying time without human presence is often the same as the remanence time) (Refer to the instruction manual)

SANIVAP steam appliance with accessories

> TECHNICAL

- Daily maintenance with a surface DD product in one operation.
- Maintenance when the patient leaves, or periodically, by the process known as *Bio cleaning* observing the 3 operations:
 - Cleaning is done by means of a cloth soaked in a surface detergent or Detergent-Disinfectant (DD) solution
 - Rinsing is done with cloth rinsed in clean water
 - Disinfection is done by means of a cloth soaked in a surface disinfectant solution.
- Specific maintenance by specialist contractors after removal of the bed from the establishment:
 - o Dispose of the packaging after decontamination of the inside by spraying with a Detergent-**Disinfectant solution**
 - o Bio cleaning operation, or,
 - Steam cleaning (accessory with microfiber band) of the flat surfaces and the base slats. \cap Change the washing mops regularly to prevent water accumulating. Clean the parts that are difficult to access with a steam nozzle (wheels, hinges after opening, corners, etc.). For tubes, use the steam nozzle with a microfiber cloth. Never direct the nozzles onto electrical boxes or actuators.
 - Dry hinges with compressed air 0
 - Attention: Disinfect jacks, electrical boxes and remote controls with a microfiber cloth soaked 0 in disinfectant.

Do not rinse or wipe.

Check the operation of all the bed functions Repair if necessary Pack in thermoplastic film

Warning

- In the event of additional precautions (Contact precautions, Droplets or Air), apply the measures recommended by the hospital hygiene department
- The use of a Javel water solution of more than 5000ppm (0.5% of active chlorine) should be justified by a microbiological risk and only applied for the required time (Risk of ageing of some materials, especially their colour).

- The concentration of alcohol-based surface disinfectant solutions should be less than 30%.

Note: The use of the terminal disinfection process is compatible with the medical bed and its accessories.



Product for external use. Do not swallow, keep away from heat sources and avoid contact with eyes.

10.6. Lifetime

The lifetime under normal conditions of use and maintenance is 8 years for beds and 5 years for accessories and boards.

10.7. Garanties

- All of our products carry a warranty against any manufacturing defect, provided the normal conditions for use and maintenance are complied with.
- > Labour costs due to changes in structures or parts under warranty are not taken into account.
- > Please refer to the standard terms of sale for the specific terms of warranty for each product.
- Every time you contact us for possible maintenance, you must quote us the information on the bed identification label and on the electric parts if these are concerned.
- Original parts shall be supplied for replacement, within the term of warranty, by our customer sales network determining the beginning of the term of warranty.
- Defective parts must be returned to ensure proper application of this warranty and also to avoid any invoicing.

10.8. Troubleshooting Guide

DEFAULT	POSSIBLE CASE	HELP
The whole bed is not working	The bed is not electrically powered	Check the electrical connection (Green power LED on controlbox)
	The remote control is fully locked	Unlock the remote control
	The infrared remote control is not powered or is not connected to the receiver.	Remove the rear cover Check batteries
		Reverse the small contactor on top of the remote control
	One or more cables are not connected properly	Check the correct connection of the electrical cables Check for the presence of anti-tear clips at the cable connections
	One or more cables are cut or pinched	Check the condition and passage of electrical cables
	An electrical element is defective	Contact after sales service
The entire bed does not work, a short and discontinuous beep sounds when a key is pressed on the remote control	The controlbox is faulty	Do a reset of the controlbox (§ Specific use) or contact after sales service if a reset is impossible
A continuous beep sounds when a key is pressed on the remote control	The backup battery has reached its last cycle	Reconnect the bed to the mains to recharge the battery
A long and discontinuous beep is emitted when the bed is in the high position (normal event)	The bed is no longer braked (position on wheels, normal event)	Press down on the variable height to remove the wheels (normal use)
The selected function of the bed does not work	The function is locked on the remote control	Unlock the function on the remote control
	The movement has reached the stop	Operate the opposite direction of movement on the remote control
	An external element blocks the mechanism	Remove the blocking element
	One or more cables are not connected properly	Check the correct connection of the electrical cables Check for the presence of anti-tear clips at the cable connections
	One or more cables are cut or pinched	Check the condition and passage of electrical cables
	An electrical element is defective	Contact after sales service
The selected function of the bed is interrupted during movement	The movement has reached the stop	Operate the opposite direction of movement on the remote control
	The movement has reached a memorized position (normal event)	Release the button on the remote control and then press (normal cycle)
	An external element blocks the mechanism	Remove the blocking element
Bed can not be moved / moves with difficulty	The putting on wheels is not carried out or incomplete	Press the remote control to put the bed on its wheels until the movement stops
	Directional wheel hinders movement	Put the pedal in the 4-wheel free position
	An external element blocks the mechanism	Remove the blocking element
	One or more wheels are defective	Contact after sales service

11. SCRAPPING

The product must be scrapped if the main requirements are no longer met, particularly when the product no longer has its original characteristics and has not been subject to corrective action during the manufacturing process.

Measures should therefore be taken to ensure that the bed is no longer used for the purpose it was originally intended.



The crossed-out bin symbol indicates that the electrical elements of the Winncare product are considered to be Electrical and Electronic Equipment (EEE), subject to EU Directive 2012/19 / EU on the Selective sorting of electrical and electronic waste (DEEE); batteries and accumulators that can be used in these products fall within the scope of the European Union and Council Directive 2006/66 / EC of 6 September 2006 on batteries and accumulators and waste batteries and accumulators. The complete product and / or the easily detachable electrical part and the batteries / accumulators contained in Winncare products must therefore be separately sorted in the countries of the European Union.



France

4 Le Pas du Château 85670 SAINT PAUL MONT PENIT TEL :+33 (0)2.51.98.55.64 FAX :+33 (0)2.51.98.59.07 Email : <u>info@medicatlantic.fr</u> Site Internet : http://www.winncare.fr